

# Installation Sheet



## Finger Keeper Industrial - RP62

Revision 2 - 17th January 2020

## Finger Keeper Industrial - RP62

### Tools & Equipment

- Tape Measure
- Table Saw
- Hand File
- Stanley Knife
- Screw Driver
- Drill
- Carpenters Pencil
- Claw Hammer

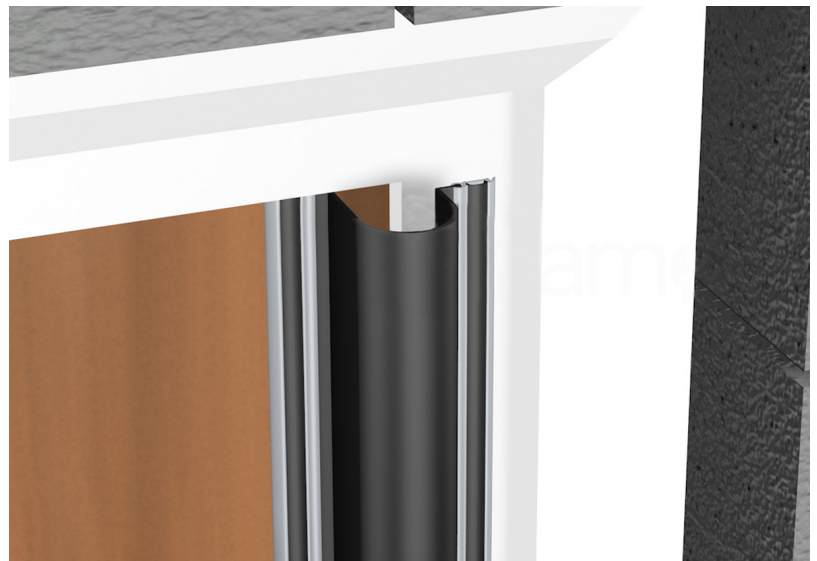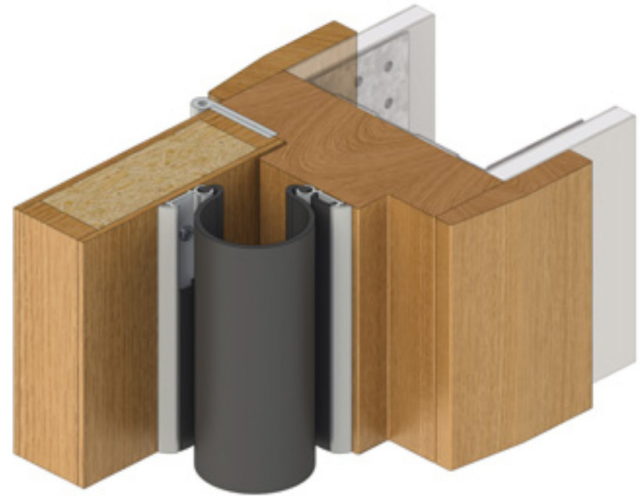

### Introduction

Finger keeper Industrial RP62 is a heavy duty finger-pinch protection device (anti-finger-trapping hinge guard) manufactured from Black EPDM fitted in an Anodised aluminium carrier, that has black inserts to conceal the fixing screws.

The EPDM safety strip prevents fingers being pinched on the hinge side of a door. It is fixed to the door and the jamb on the hinged side.

**Installation**

**Installation Notes:** Two RP62's are required for pivot doors (**FIG 2**)

A safety barrier which prevents fingers being jammed on the hinge side of the door. It is fixed to the door and the jamb on the hinge side.


**Location** Butt hinged or centre pivot door.

**Seal Lengths** 2100mm (max.) Can be cut to length required.

**Seal Lengths** Anodised satin clear. Reversible brown and white PVC barrier.

**Fixing Method** Zinc plated, cross recess head S.T. screws of the appropriate size are supplied. Fixing holes are slotted. Push in cover strip.


1. Remove plastic coverstrips. fold RP62 so aluminium meets together (**FIG 1**) ensuring desired colour is facing outwards, if not remove PVC barrier, rotate and replace into aluminium. Clamp RP62 and machine cut the aluminium and the PVC to size. Neatly biff or centre punch back side of aluminium to lock in PVC barrier preventing movement.
2. With door fully open, position one side of RP62 on door face. Check to make sure other side of RP62 will reach door jamb or stop. Lightly screwfix in centre of every slot (**FIG 3**).
3. Position other side of RP62 on door stop or jamb. Lightly screwfix in centre of every slot (**FIG 3**).
4. Open and shut the door to check for correct latching. Adjust RP62 if needed. Tighten all fixing screws.
5. Measure and cut coverstrip to size. Push in the cover strip. Neatly biff or centre punch each end of aluminium to lock in coverstrip preventing movement.

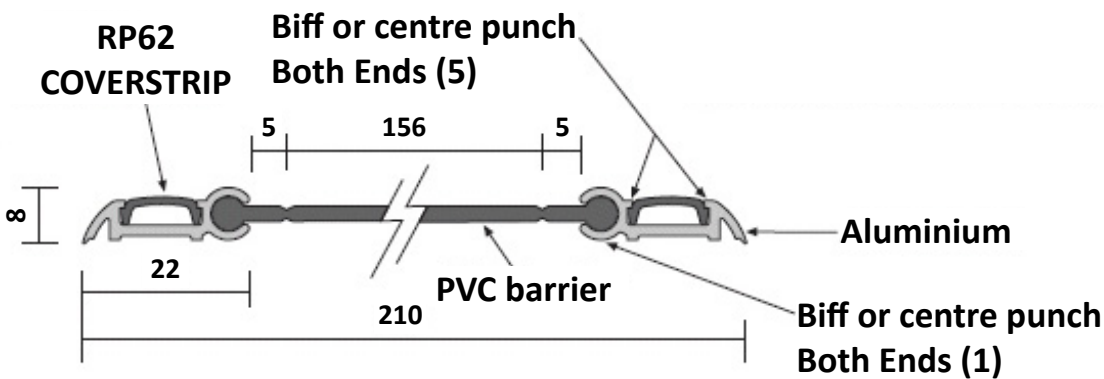


**FIG 1**



**FIG 2**

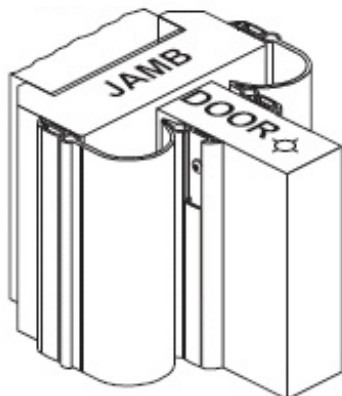

**FIG 3**

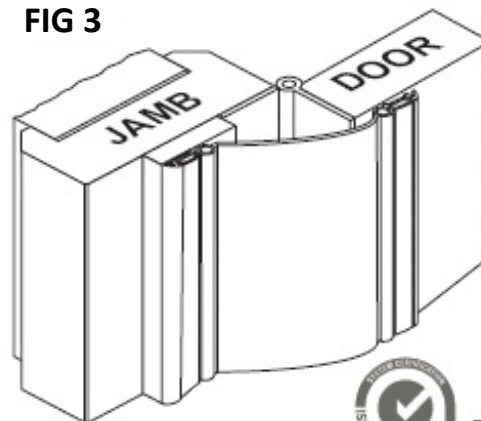

Part No. ZSDSRP62BW

© COPYRIGHT 07/10

## Storage and disposal

Finger Keeper Industrial RP62 should be stored indoors. No shelf life is given as this product will not deteriorate in storage. For further information on installation requirements please contact the technical team on: tel [01329 844 500](tel:01329844500) or email [sales@astroflame.com](mailto:sales@astroflame.com)

As part of our policy of ongoing improvements, we reserve the right to modify, alter or change product specifications without giving notice. Product illustrations are representations only. All information contained in this document is provided for guidance only, and as ASTROFLAME (FIRE SEALS) LTD has no control over the specific application or installation methods of the products, or of the prevailing site conditions, no warranties expressed or implied are intended to be given as to the actual performance of the products mentioned or referred to, and no liability whatsoever will be accepted for any loss, damage or injury arising from the use of the information given of products mentioned or referred to herein.

The above information to the best of our knowledge is true and accurate and based upon current test data and is supplied for your guidance only. Customers should satisfy themselves to the suitability of the product based on the products limitation of applications and that the product is fit for purpose for their intended use and no guarantee is given or implied since the conditions of actual use are beyond our control. ASTROFLAME (FIRE SEALS) LTD, disclaim any liability for loss, damage or other expense arising from the use of information, data or products mentioned or referred to and reserve the right to change any details or specifications without notice. If you are in any doubt as to the suitability of this product for your intended application please contact our technical team on 01329 844500 or email [sales@astroflame.com](mailto:sales@astroflame.com) and we will contact you.